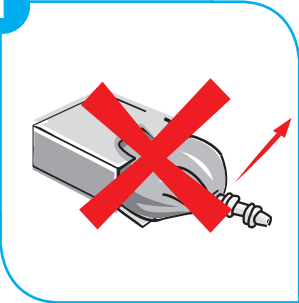
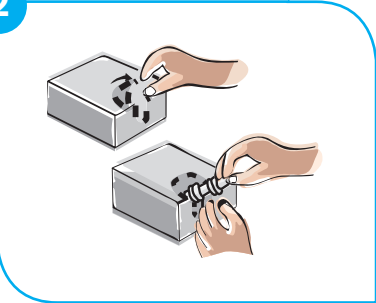
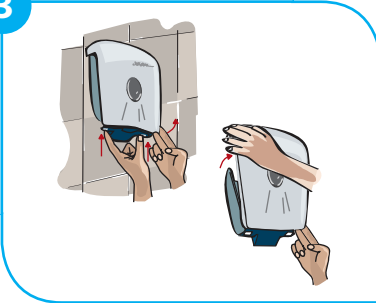
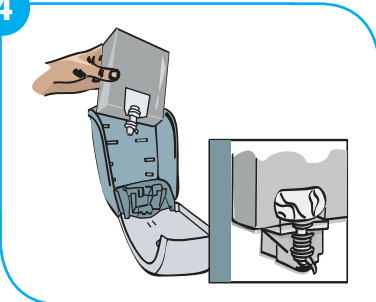



# How to Replace a Soft Care Line Cartridge


- 

1 Do not remove bag from cardboard box.
- 

2 Open Soft Care packaging along tab & pull out dispensing nozzle.
- 

3 To open Soft Care dispenser unit press the release button at the bottom of the unit and pull the top of the cover forward.
- 

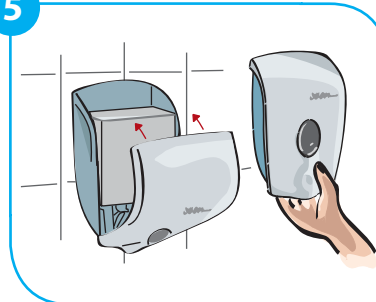4 Fit cartridge into Soft Care dispenser unit ensuring the nozzle is in place.
- 

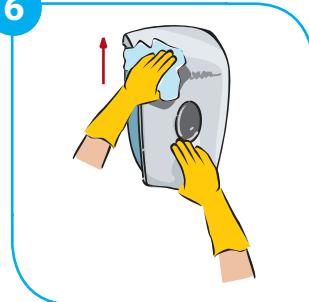5 Close the front cover. The unit is now ready for use.
- 

6 When cleaning the dispenser, support the front cover with your fingertips and wipe in vertical movements from the bottom to the top to prevent the product from being dispensed.

**QUESTIONS?**  
Freephone UK: 0800 525 525  
Freephone IRE: 01 8081808

Please note: All telephone calls to this number are recorded for training and quality purposes.